# WiFi smart waterproof socket USER GUIDE

WiFi connection

Alexa/Google/DuerOS

Customize schedules for daily uses

One App control your home

(a) Control your device anywhere

Timing home appliances

Device Sharing



Model No: SNW-Input: AC110-250V APP: Smart Life Protection level: IP66 Output: 10A–16A WiFi: 2.4G\_WiFi

#### Preparation before use

- >、Your Smart phone or tablet has connected to a 2.4G WiFi with internet
- >, Not allow to hide WiFi(SSID).
- >. Do not set "not allow Wi-Fi squatter" or MAC address limits on routers

#### 1, Download APP



In APP store or Google search "Smart Life"



- 2、 If permission request appears in APP, please allow it
- 3. Register an account and log in



- 4. Power the smart socket
- **5. Observe the LED:** If the red LED fast blinks (Blink twice a second), is in pairing mode, Direct next step. If red LED is not in fast blinks (Blink twice a second), Press the button for 7s until the red LED fast blinks (Blink twice a second).

#### 6, Tap " +" or " Add Device" to add a new device



#### 7、Select " Electrician" -> " Socket(Wi-Fi)"



#### 8. Input your home WiFi password, click "Next"




#### Click next as prompted





#### Select "Confirm the indicator is blinking rapidly", click " Next"



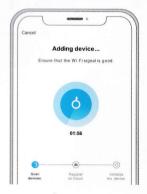

#### 10. Complete and can rename new device



## 11. The control interface appears after successful configuration



pairing falled: Retry or switch pairing mode. If airing falled many times, please read "FAQ"



FAQ: Pairing failed, timeout

- 1.Check WiFi password, try again
- 2.Restart Router, try again
- 3. Try Compatible Pairing Mode
- 4.Read Help Center or Fill in the feedback





Smart Life

### Why is the device offine after a successful connection?

If there is an offline situation, please check it according to the following methods:

- 1. Please check whether the equipment is normally energized.
- 2. Whether the equipment has been off power or off the network, such as broken link, there is a process for online, please confirm whether the display is online after 2–3
- minutes.

  3. Please check whether the network where the equipment is located is stability; put your phone or lpad in the same
- network, and put it next to the device, try to open the web page.
- Please confirm whether the home Wi-Fi network is normal or have modified Wi-Fi name, password etc., if any, also need to reset the device and re-add.
- 5. If the network is working, but the device is still offline, please confirm whether there are too many Wi–Fi connections. You can try to restart the router, power the device again after power off, and then wait for 2–3 minutes to see if the device can be online.

  If all the above has been eliminated and there is still a

problem, it is recommended to remove the device and re-add. If there is still a problem please select the device in the APP user feedback and submit feedback, we will submit to technicals to inquiry reasons.

#### Amazon Echo and Google home user guide



