



30 100 018 - 1



## Wireless pushbutton tracker FTTB

Temperature at mounting location:  
-20°C up to +50°C.  
Storage temperature: -25°C up to +70°C.  
Relative humidity:  
annual average value <75%.

### Wireless pushbutton tracker with battery. 55x44 mm, 15 mm high. Weighs only 20 grams.

The FTTB wireless pushbutton tracker has a blue pushbutton to send normal pushbutton telegrams.

On delivery, the sensor only operates as a wireless pushbutton.

After opening the housing (grasp into the joint and prise apart), switch the tracker on by shifting the slide switch to the *Tr* position.

The sensor then sends a presence telegram every 60 seconds.

An internal 3V button cell CR2032 supplies power for several years.

To activate the button cell, open the housing, pull out the insulating strip and press the LRN button.

To change the button cell and to activate the tracker, the housing must be opened.

After a battery change, the LRN button must be pressed.

The wireless sensor can be taught in as a tracker (presence detector) in the following actuators and in the GFVS: FSR14, FSR61, FSR71, FTN14, FUD14, FUD61, FUD71, FZK14, FZK61, FL62, FD62 and FSLA.

If the tracker (presence detector) is taught-in in one of this actuators, it will turn off after 5 min. if the presence telegram is no more received.

If the sensor should work as a tracker (presence detector) and as a pushbutton in an actuator, it must be taught-in first as a tracker and then as a pushbutton.

**To teach-in as a tracker**, the LRN-key on the rear must be pressed by using a thin pin (straightened paperclip) through the hole.

**To teach-in as a pushbutton**, the blue button must be pressed, see the operating instructions of the actuator for more details.

Presence data telegram EEP: A5-07-01  
ORG7

Data\_byte3 = Operating voltage (20mV/value)

Data\_byte2 = -

Data\_byte1 = 0xF0

Data\_byte0 = 0x0F

Presence telegram:

ORG7: 0x1C080D80

Pushbutton telegram: ORG5: 0x70 at pressing  
and 0x00 at releasing.

**The crossed-out waste container indicates that batteries may not be disposed with other household or commercial waste.**

**Batteries can be returned free of charge to the retail outlet after use.**




**Attention: Danger of explosion if battery is replaced improperly. Only replace it by an equivalent type!**

## Manuals and documents in further languages



<http://eltako.com/redirect/FTTB>

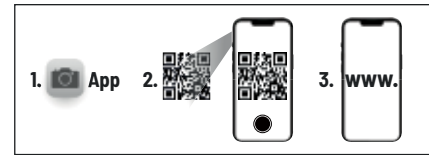

**enocean®**

THE UNIQUE WIRELESS **PROFESSIONAL  
SMART HOME** STANDARD

|                |            |
|----------------|------------|
| Frequency      | 868.3 MHz  |
| Transmit power | max. 10 mW |

**Hereby, Eltako GmbH declares that the radio equipment type FTTB is in compliance with Directive 2014/53/EU.**

**The full text of the EU declaration of conformity is available at the following internet address: [eltako.com](http://eltako.com)**

**Must be kept for later use!**

### Eltako GmbH

D-70736 Fellbach

**Technical Support English:**

+49 711 943 500 25

technical-support@eltako.de

[eltako.com](http://eltako.com)

4/1/2022 Subject to change without notice.